



**Flanders  
Scientific  
Inc.**

## **AM Series Monitor Firmware Update Instructions**

20220209

---

Flanders Scientific, Inc.  
6215 Shiloh Crossing  
Suite G  
Alpharetta, GA 30005  
Phone: +1.678.835.4934  
Fax: +1.678.804.1882  
E-Mail: [Support@FlandersScientific.com](mailto:Support@FlandersScientific.com)  
[www.FlandersScientific.com](http://www.FlandersScientific.com)

# AM Series Monitor Firmware Update Instructions


Main Menu	System Status
Function	Input SDI 1
Scopes & Audio Meters	Video Format 720p 59.94Hz
Video	Volume 16
Audio	Contrast 0
Marker	Brightness 0
Alarm	Chroma 0
OSD	Hue 0
GPI	Model AM250-3G
Display Alignment	S/N MA250A00000
System	System Version 1.1.03-2144
System Status	
Support	

Check your monitor model and current firmware version in the monitor's System Status menu.

Download new firmware from [FlandersScientific.com](http://FlandersScientific.com)



Unzip the downloaded file.  
Do not try to open or mount the .img file.

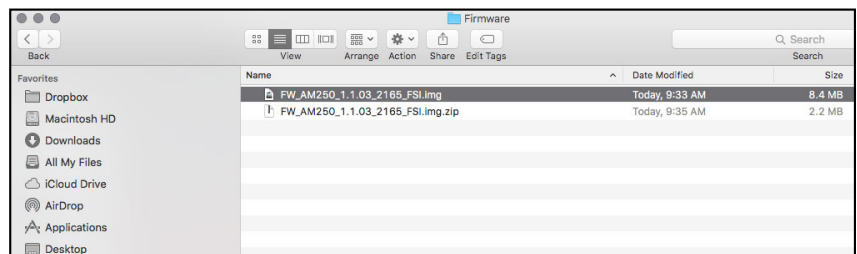


Main Menu	System
Function	Load Profile
Scopes & Audio Meters	Save Profile
Video	Update Firmware
Audio	Keypad LED Normal
Marker	Chroma/Bright/Contrast Unlock
Alarm	Luminance Interval On
OSD	UDisk Mode Off
GPI	Language English
Display Alignment	DHCP On
System	IP Address 192.168.001.111
System Status	Subnet Mask 255.255.255.0
Support	RS422 Address 3


Verify UDisk mode is turned ON in the monitor's System menu. (Display Alignment menu in older firmware versions)

If OFF, turn UDisk mode ON.

Connect the provided Firmware Update Cable to the monitor's GPI port and your computer's USB.


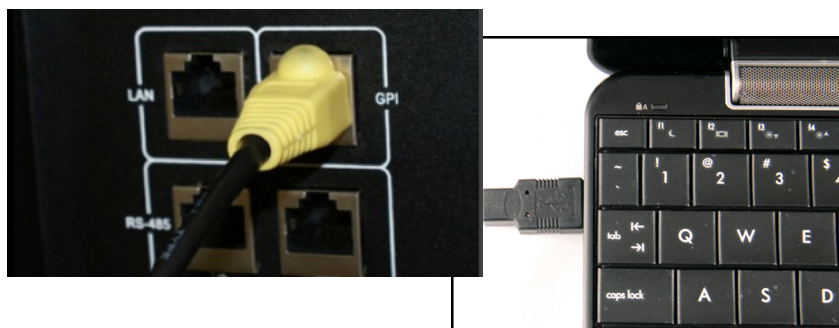


# AM Series Monitor Firmware Update Instructions

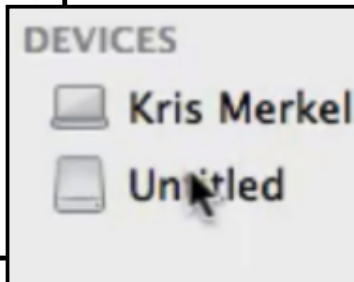

The monitor will appear in Mac's Finder or PC's My Computer as mass storage.


Please note: In recent versions of MacOS, it may take a long time for USB devices to connect or disconnect.

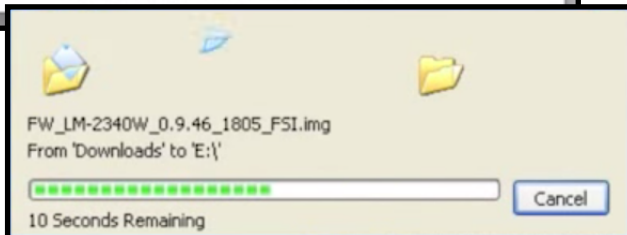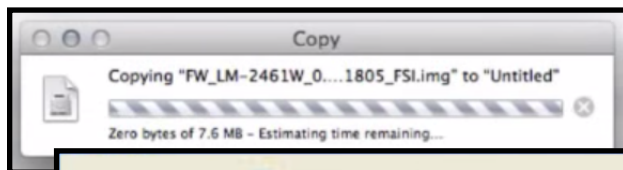

Copy / Paste or Drag and Drop the unzipped .img Firmware file to the monitor.

Main Menu	System
Function	Load Profile
Scopes & Audio Meters	Save Profile
Video	Update Firmware
Audio	Keypad LED Normal
Marker	Chroma/Bright/Contrast Unlock
Alarm	Luminance Interval On
OSD	UDisk Mode On
GPI	Language English
Display Alignment	DHCP On
System	IP Address 192.168.001.111
System Status	Subnet Mask 255.255.255.0
Support	RS422 Address 3

Select Update Firmware from the monitor's System menu. (Display Alignment menu in older firmware versions)

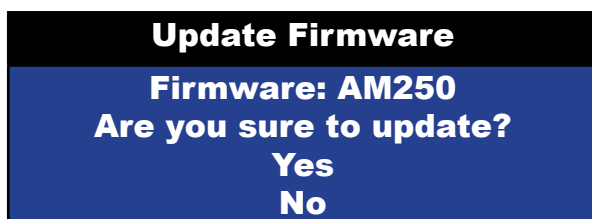

Confirm Yes when prompted to update.



Reboot the monitor when prompted after the update has succeeded.