



**Flanders
Scientific
Inc.**

BM & CM Series Monitor Firmware Update Instructions

20220209

Flanders Scientific, Inc.
6215 Shiloh Crossing
Suite G
Alpharetta, GA 30005
Phone: +1.678.835.4934
Fax: +1.678.804.1882
E-Mail: Support@FlandersScientific.com
www.FlandersScientific.com

BM & CM Series Monitor Firmware Update Instructions

Main Menu	System Status
Function	Input SDI 1
Scopes & Audio Meters	Video Format 720p 59.94Hz
Video	PAP Input SDI 2
Audio	Video Format No Signal
Marker	Volume 16
Alarm	Contrast 0
OSD	Brightness 0
GPI	Chroma 0
Color Management	Hue 0
System	Model CM250-3G
System Status	S/N M250A00000
Support	Version 1.1.03-2144


Check your monitor model and current firmware version in the monitor's System Status menu.

If you are currently running firmware version 9.53-1907 or earlier, download the legacy instructions found [here](#).

Download new firmware from FlandersScientific.com



Unzip the downloaded file.
Do not try to open or mount the .img file.

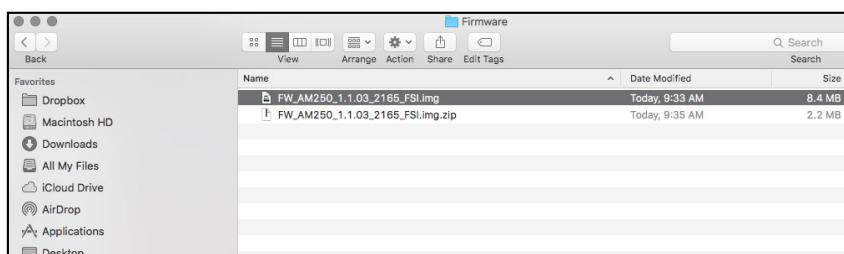



Main Menu	System
Function	Load Profile
Scopes & Audio Meters	Save Profile
Video	Update Firmware
Audio	Keypad LED Normal
Marker	Chroma/Bright/Contrast Unlock
Alarm	Luminance Interval On
OSD	UDisk Mode On
GPI	Language English
Color Management	DHCP On
System	IP Address 192.168.001.111
System Status	Subnet Mask 255.255.255.0
Support	RS422 Address 1

Verify UDisk mode is turned ON in the monitor's System menu. (Display Alignment menu in older firmware versions)

If OFF, turn UDisk mode ON.



Connect the provided Firmware Update Cable to the monitor's GPI port and your computer's USB.

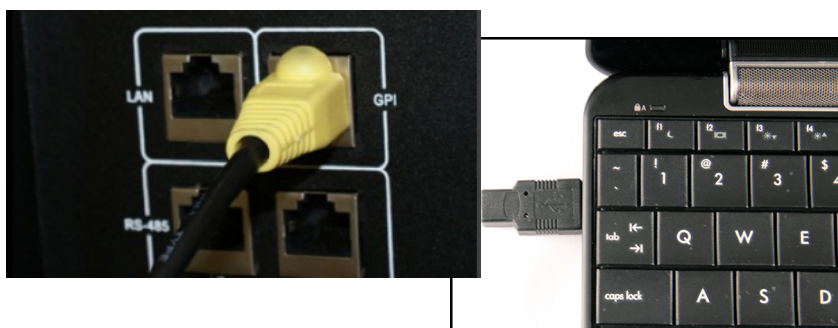

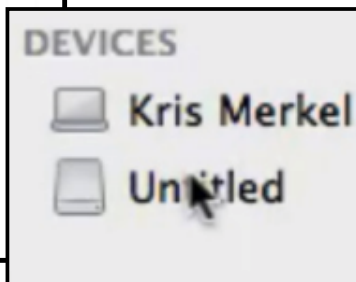

The monitor will appear in Mac's Finder or PC's My Computer as mass storage.

Please note: In recent versions of MacOS, it may take a long time for USB devices to connect or disconnect.

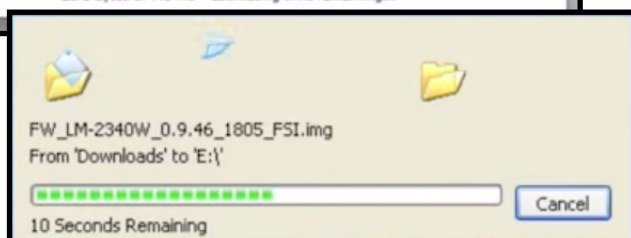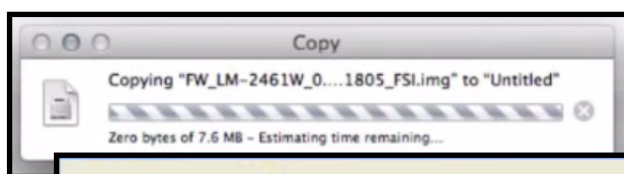

Copy / Paste or Drag and Drop the unzipped .img Firmware file to the monitor.

Main Menu	System
Function	Load Profile
Scopes & Audio Meters	Save Profile
Video	Update Firmware
Audio	Keypad LED Normal
Marker	Chroma/Bright/Contrast Unlock
Alarm	Luminance Interval On
OSD	UDisk Mode On
GPI	Language English
Color Management	DHCP On
System	IP Address 192.168.001.111
System Status	Subnet Mask 255.255.255.0
Support	RS422 Address 1

Select Update Firmware from the monitor's System menu. (Display Alignment menu in older firmware versions)



Confirm Yes when prompted to update.



Reboot the monitor when prompted after the update has succeeded.