



**Flanders  
Scientific  
Inc.**


## **DM Series Monitor Firmware Update Instructions**

20161118

---

Flanders Scientific, Inc.  
6215 Shiloh Crossing  
Suite G  
Alpharetta, GA 30005  
Phone: +1.678.835.4934  
Fax: +1.678.804.1882  
E-Mail: [Support@FlandersScientific.com](mailto:Support@FlandersScientific.com)  
[www.FlandersScientific.com](http://www.FlandersScientific.com)


# DM Series Monitor Firmware Update Instructions

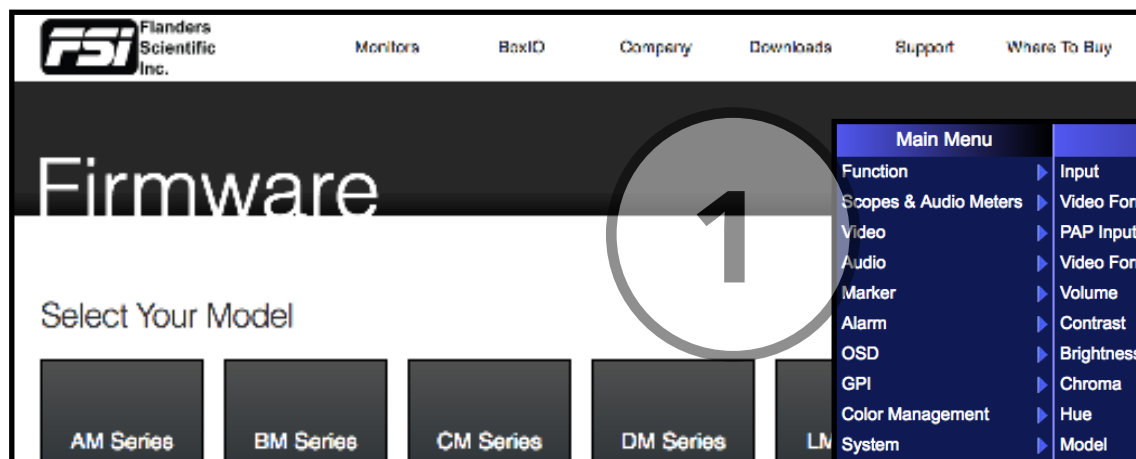


Download new firmware from  
FlandersScientific.com

Main Menu	System Status
Function	Input SDI 1
Scopes & Audio Meters	Video Format 720p 59.94Hz
Video	PAP Input SDI 2
Audio	Video Format No Signal
Marker	Volume 16
Alarm	Contrast 0
OSD	Brightness 0
GPI	Chroma 0
Color Management	Hue 0
System	Model DM250-3G
System Status	S/N MD250A0000
Support	System Version 1.1.03-2144


You can check the monitor's current firmware version in the System Status menu.

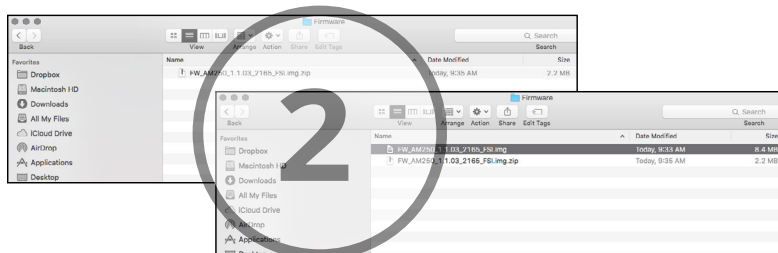

Unzip the downloaded file.  
Do not try to open or mount the .img file.

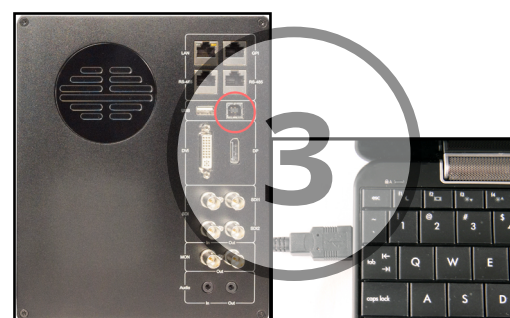


Connect the provided Firmware Update USB Cable to the monitor's right USB port and your computer's USB port.

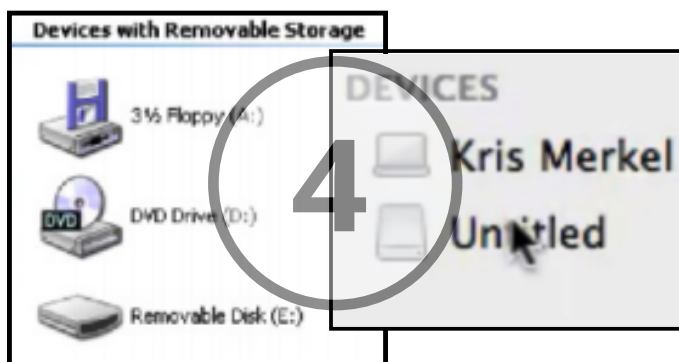


The monitor will appear in Mac's Finder or PC's My Computer as mass storage.


Note: If connecting to recent Mac OS platforms it may take several minutes for the monitor to appear as a mass storage device after plugging in the USB cable, please be patient.

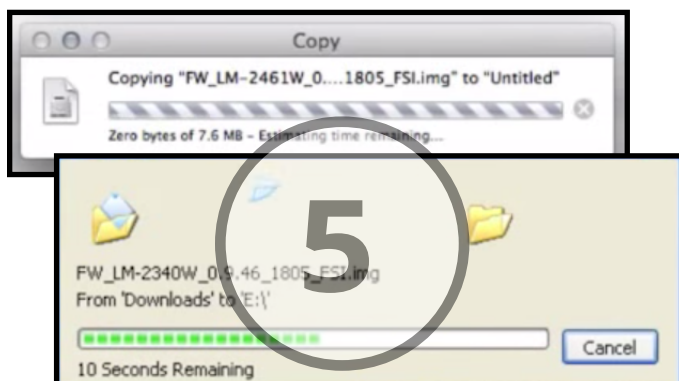

Copy / Paste or Drag and Drop the unzipped .img Firmware file to the monitor.

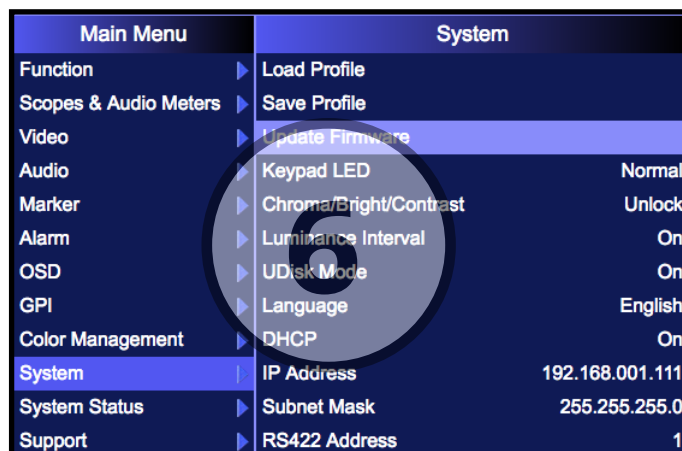

Select Update Firmware from the monitor's System (Color Management in older firmware versions) menu.

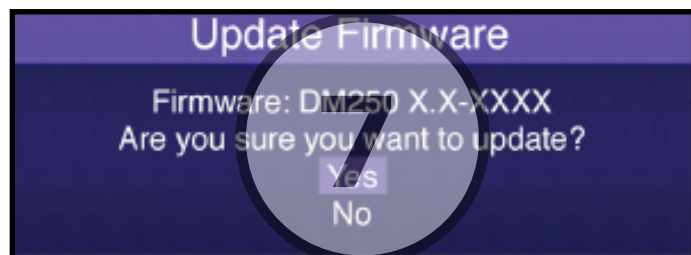

Confirm Yes when prompted to update.



Reboot the monitor when prompted after the update has succeeded.