




**Flanders
Scientific
Inc.**

LM Series & CM170 Monitor Firmware Update Instructions

20150602

Flanders Scientific, Inc.
6215 Shiloh Crossing
Suite G
Alpharetta, GA 30005
Phone: +1.678.835.4934
Fax: +1.678.804.1882
E-Mail: Support@FlandersScientific.com
www.FlandersScientific.com

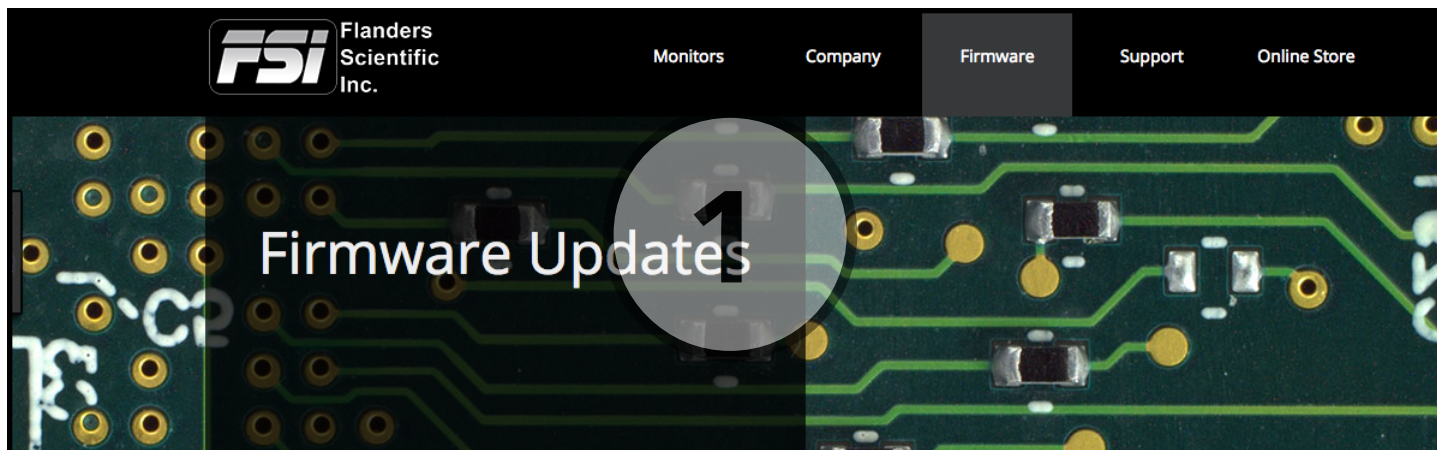

Download new firmware from:
FlandersScientific.com/index/firmware.php


Main Menu	System Status
Function	Input SDI 1
Scopes & Audio Meters	Input Mode 720p 59.94Hz
Video	PIP Input SDI 2
Audio	PIP Input Mode No Signal
Marker	Volume 0
System	Contrast 0
Alarm	Brightness 0
OSD	Chroma 0
GPI	Hue 0
Color Management	IP Address 000.000.000.000
System Status	Model CM250-3G
Support	Version 1.0.00-1971

Check your monitor model and current firmware version in the monitor's System Status menu.


If you are currently running firmware older than version 9.53-1907 proceed to step 3.

Main Menu	System
Function	SDI Hue Adjustment Off
Scopes & Audio Meters	Luminance 29
Video	Luminance Interval On
Audio	LED Light On
Marker	UDisk Mode On
System	DHCP On
Alarm	IP Address 192.168.1.1
OSD	Subnet Mask 255.255.255.0
GPI	Language English
Color Management	Part Display Off
System Status	Load Profile
Support	Save Profile

If you are currently running firmware version 9.53-1907 or later verify the UDisk option found on the monitor's System Menu is set to ON and then skip to step 7.

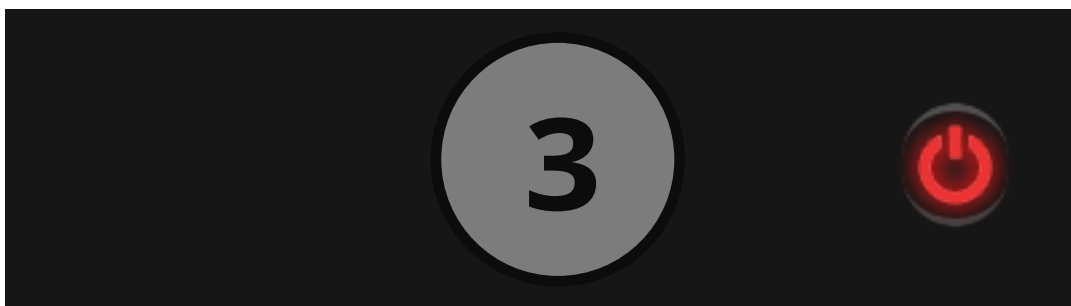


Turn the monitor OFF.

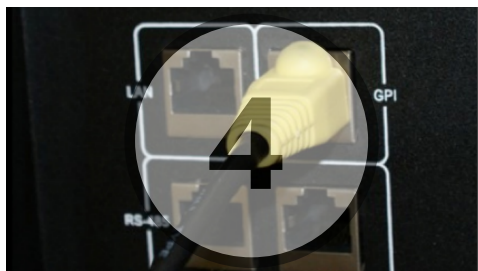

Connect the provided Firmware Update Cable to the monitor's GPI port.



On the monitor's keypad enter the following sequence:
MENU, ENTER, UP, DOWN,
MENU, ENTER, UP, DOWN,
MENU, DOWN, POWER

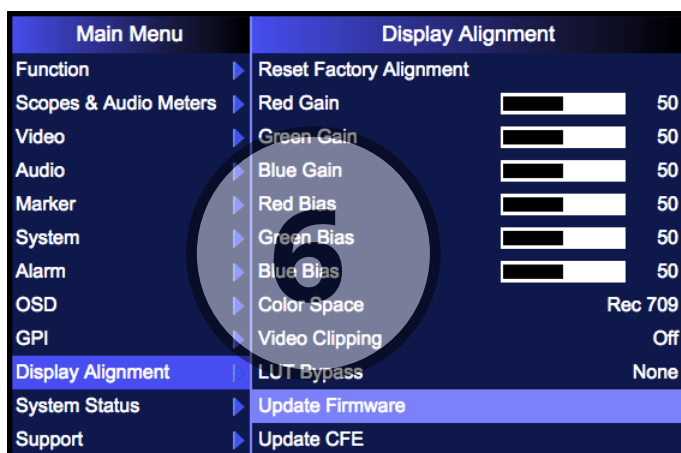


The monitor has successfully entered update mode if the Green Tally comes on followed by the Amber Tally.

You can also verify that the monitor is in update mode by going to the Display Alignment menu and seeing if the update firmware option is still grayed out.




Connect the provided Firmware Update Cable to your computer's USB port.

(If you came from Step 2, Also plug it into the monitor's GPI port.)

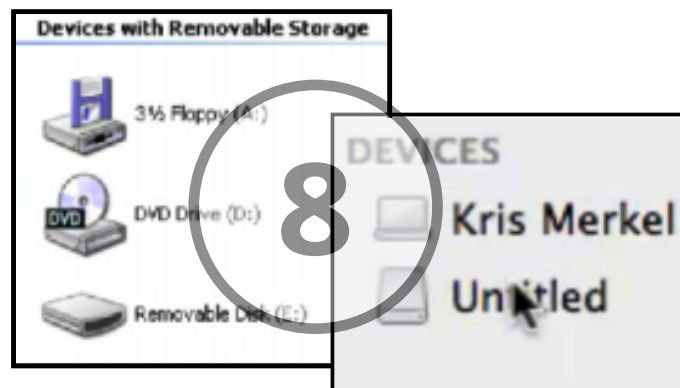

The monitor will appear in Mac's Finder or PC's My Computer as mass storage.

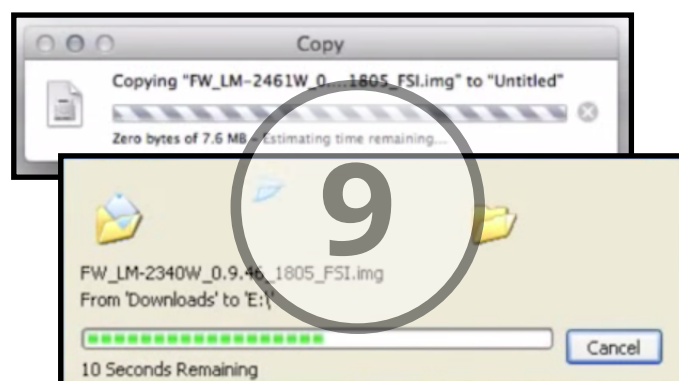


Copy / Paste or Drag and Drop the downloaded Firmware file to the monitor.


LM Series & CM170 Monitor Firmware Update Instructions




Flanders
Scientific
Inc.

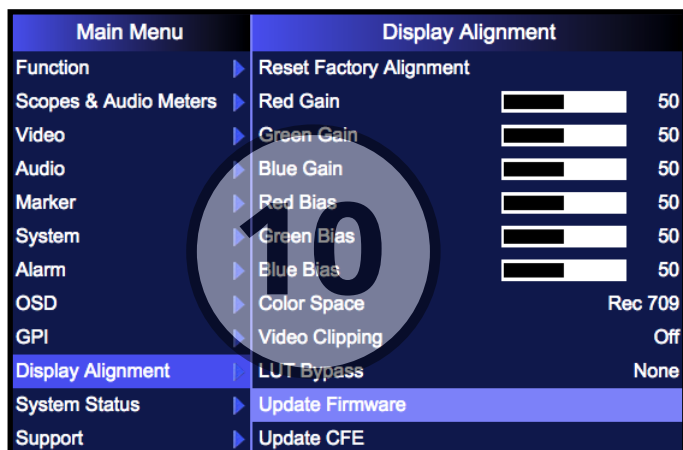

Select Update Firmware from the monitor's Display Alignment menu.

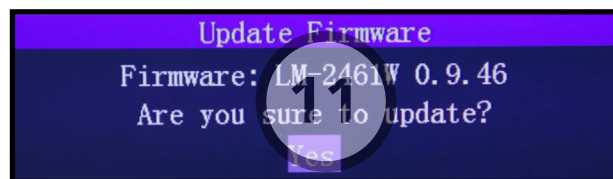

Confirm Yes when prompted to update.

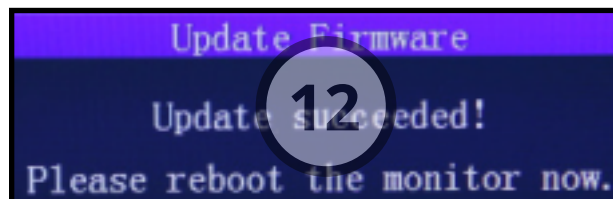

Reboot the monitor when prompted after the update has succeeded.